


Installing a new "Smart Chip" in your Smart Color System


Created by Arcade Upkeep

Email: Brandon@arcadeupkeep.com



Tools you'll need: thin flat blade screw driver or other prying device.

Step 1: Start by looking at your Smart Color Board. The big white chip with the writing on it is what we'll be changing (it should also be what you have for the new game you are installing.) The important things to note are the arrow on the board (which may be under the chip) and the black mark (notch) on the chip, **these must be facing each other! Installing the chip backward may destroy it!**

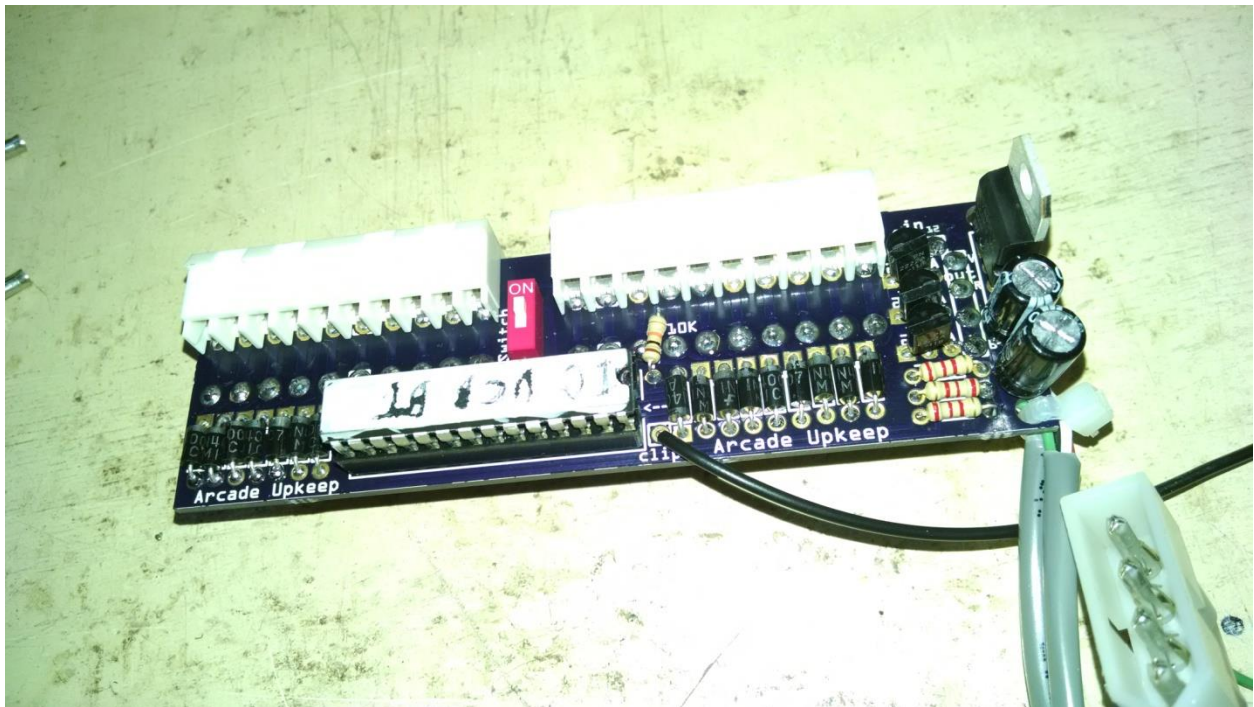

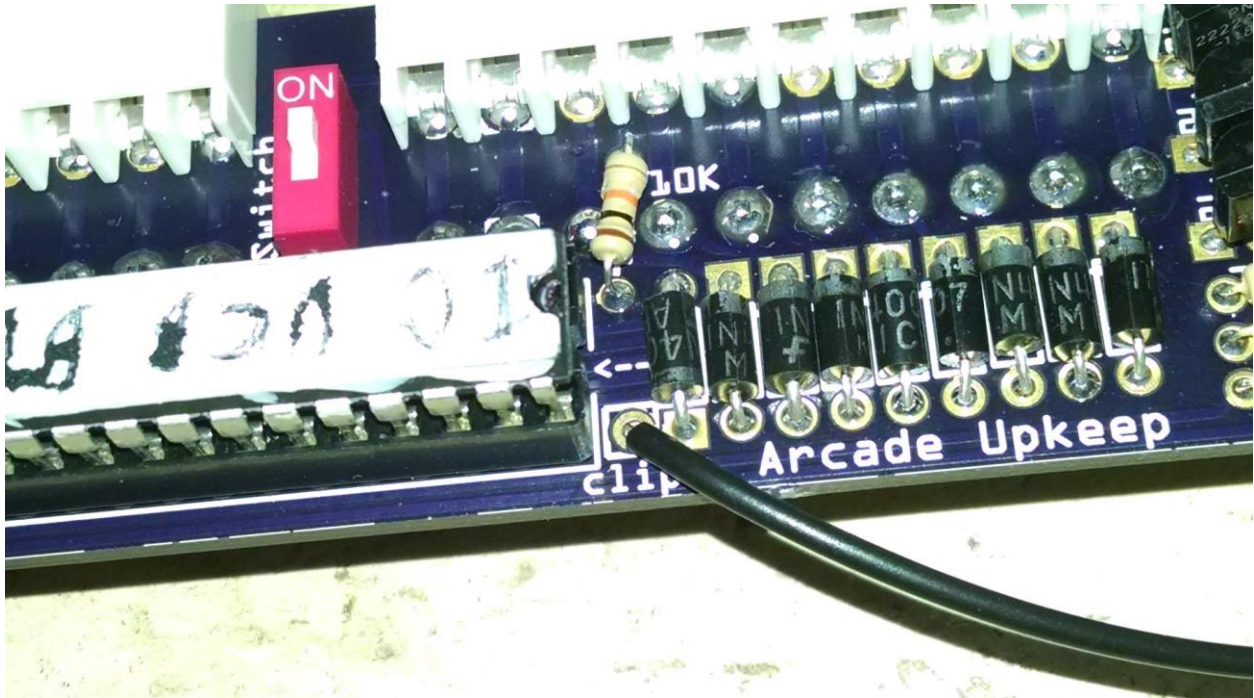

Step 2: Using a small flat head screw driver carefully pry the chip up off of the board, it may be easiest to start from the end without the black notch.

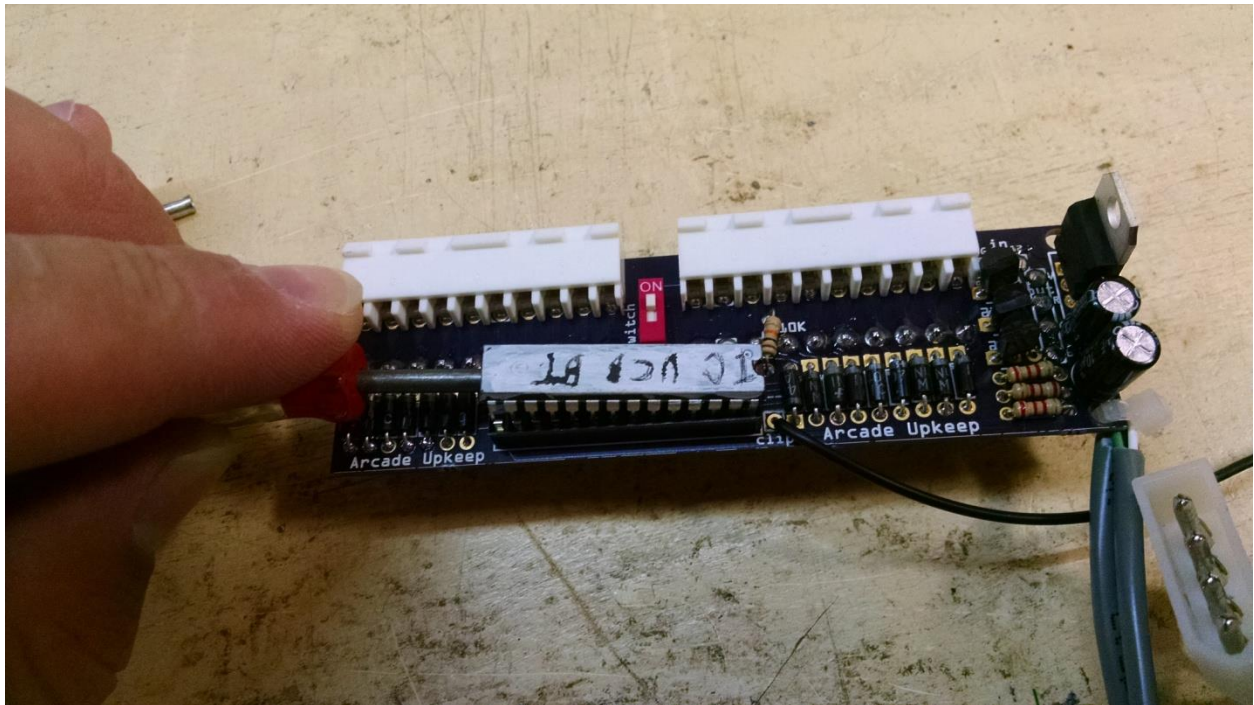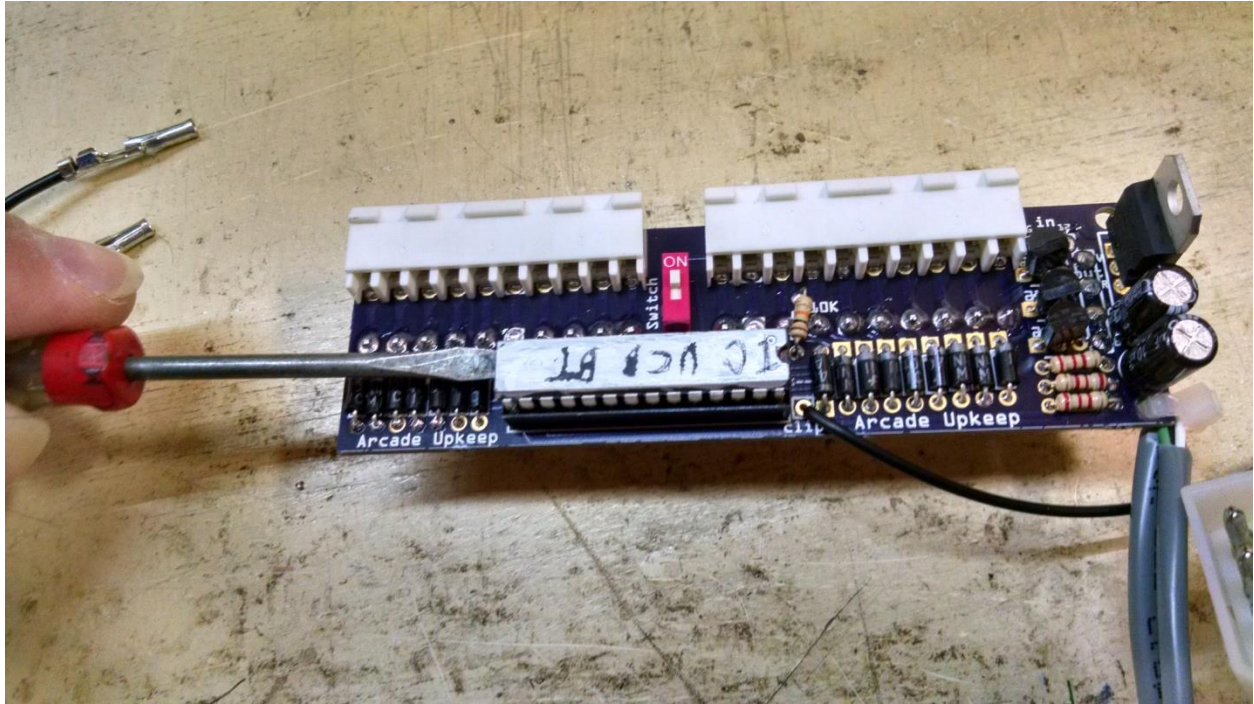

Step 3: Carefully align the new chip with the socket on the board making sure all the pins are lined up with the socket. **Be sure to check that the black notch and the board's arrow are**

facing each other! Then, using even firm pressure, press the new chip into its socket. That's it, you're done.

If you have any questions on any step of the way, or you have an idea to improve this kit or the instructions, send me an email at Brandon@arcadeupkeep.com

Kit and Instructions by Arcade Upkeep.

www.arcadeupkeep.com